

Quick Start Programming...

Kenwood TH-D7A

- Step 1. Press the **A/B** key to choose the band
- Step 2. Press the **VFO** key
- Step 3. Select your frequency using the main tuning knob, or direct input from the keypad
- Step 4. To select a TONE, press the **F** Key and there will be a flashing number. Select **F-1**, press **OK** on the joy stick, and the **OFF** will flash. Turn the main tuning knob to **ON**, and then press **OK** again. The **T** will show in your display.
- Step 5. Press the **F** Key again. Go to **F-2**, press **OK**, and the PL number will flash. Turn the main tuning knob to the desired PL/Encode, and press **OK**.
- Step 6. To enter all the above into a memory location, press the **F** Key then **MR** Key. The memory number will flash. Turn the main tuning knob to desired memory location, and then press **MR** Key to store your selection.

To recall memory, just press the **MR** Key again.