

Kenwood TH-G71A

- Step 1 Press the **Band Key**
- Step 2 Press the **VFO Key**
- Step 3 Select your frequency by turning the main tuning knob, or entering directly from the keypad.
- Step 4 Select your Shift (- or +) by pressing the **F Key** then the Shift key multiple times until desired shift is shown in the display.
- Step 5 Selecting Tone/PL/Encode by pressing the F key then the Tone/Low key until a T appears.
- Step 6 Press the F key then the Tone/Sel (9) key, and by using the main tuning knob, select your tone
- Step 7 Memory entry — press F key and you will see a memory number flash in the display. Select the memory by using main tuning knob to select desired memory number. Then press **M.IN/MR** to store that frequency into memory.
- Step 8 Recalling memory — press the **MR** key and the memory number will re-appear. To change memory, turn the main tuning dial to desired memory channel.