

Yaesu FT-60R Setup

Frequency

1. If in memory mode, press **V/M** to select VFO mode.
2. Press **Band** repeatedly to select band.
3. Use the VFO knob to select the frequency, or enter the frequency using the numeric keypad.

Tone

1. Press **F/W**, then **1 (SQ TYP)** to enable tone operation.
2. Rotate **DIAL** knob to select “**TONE**”
3. Press **PTT** to save setting.
4. Press **F/W**, then **2 (CODE)** to enable tone selection.
5. Rotate **DIAL** knob to select desired tone frequency.
6. Press **F/W** to save selection.

Repeater Shift (probably won't need to change this)

1. Press **F/W**, then **0 (SET)** to enter Set mode.
2. Rotate **DIAL** knob to select Set Mode Item 38: **RPT MOD**.
3. Press **F/W** momentarily to enable adjustment of this item.
4. Rotate **DIAL** knob to select desired shift: “**RPT.-**”, “**RPT.+**”, or “**RPT.OFF**”.
5. Press **PTT** to save setting and return to normal operation.

Offset (probably won't need to change this)

1. Press **F/W**, then **0 (SET)** to enter Set mode.
2. Rotate **DIAL** knob to select Set Mode Item 45: **SHIFT**.
3. Press **F/W** momentarily to enable adjustment of this item.
4. Rotate **DIAL** knob to select desired frequency shift.
5. Press **PTT** to save setting and return to normal operation.

Memory Storage

1. Press and hold **F/W** for one second or until the memory channel indicator on the upper right begins flashing.
2. You have 10 seconds to select the memory channel for the current radio settings by using the **DIAL** knob. If you do not make a selection, the current settings are stored in the next available memory channel.
3. Press **F/W** to save the memory channel setting.

Internet Link Connect mode Disable

1. Press **F/W**, then press **0 (SET)** to enter Set mode.
2. Rotate **DIAL** knob to select Set Mode Item 21: **I NET**.
3. Press **F/W** momentarily to enable adjustment of this item.
4. Rotate **DIAL** knob to select: “**INT.OFF**”.
5. Press **PTT** to save setting and return to normal operation.